



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Up	 Up
 Play	 Play / Slow	 i	 Info / Angle
 Pause	 Pause / Step / Freeze	 Left	 Left
 Stop	 Stop / Hold	 OK	 OK
 Rec	 Rec / Rec Mode	 Right	 Right
 <<	 << / Tune-	 Exit	 Exit / Cancel / Clear
 >>	 >> / Tune+	 Down	 Down
 Lang	 Audio / Lang I/II	 Back	 Back / Return
 Source (Games)	 Eject / Surround	 Vol+	 Vol+
 Movie-Music-Phot	 Picture / Format	 World (Violet)	 Smart / List
 [≡]..	 Zoom / Size	 PR+	 CH+ / Page+
 */O	 Sleep / Timer	 Vol-	 Vol-
 TV	 TV/Radio /	 */Q	 Display / Media
 Q.Menu	 D.Menu / Top	 PR-	 CH- / Page-
 [-O-]	 Setup / OPT /	 1	 1
 [≡]/Text	 Text / Goto	 2	 2





	Original	Replacement	
	3	 CD - STB	3
	4	 VIDEO	4
	5	 TAPE	5
	6	 TUNER	6
	7	 AUX - HDD	7
	8	 USB	8
	9	 BLUETOOTH	9
	Guide	 GUIDE EPG	Guide / EPG / -/--
	0	 HDMI - BAT	0
	Red	 NETFLIX SEARCH	Red / Netflix / Search
	Green	 APP REPEAT	Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM	Blue / Prime Video / Random
	Recall	 SHIFT + RETURN BACK	Shift + Back / Return

Original	Replacement

