




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Shift + Back / Return
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol-		Vol-
	i/Info		Info / Angle
	PR-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	World		Smart / List
	Music Photo		Picture / Format
	Guide		Guide / EPG / -/-
	*/o		Display / Media
	*/o..		Shift + Display / Media





Original	Replacement
	Text / Goto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Lang / Prime Video / Audio
	Shift + Text /
	Setup / OPT /
<< button"/>	<< / Tune-
	Pause / Step / Freeze
>> button"/>	>> / Tune+
	Rec / Rec Mode
	Play / Slow
	Stop / Hold

Original	Replacement

