 

 



 















 













 



 

 







 



 







 

 





 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 [≡]/Text	 Text / Goto	 Source	 AV / Input / RDS
 [≡?]	 Eject / Surround	 ATV	 Shift + D.Menu / Top Menu
 [...]	 Subtitle / EQ	 DTV	 D.Menu / Top
 [≡+]	 Pause / Step / Freeze	 EPG	 Guide / EPG / -/-
 [≡o]	 Shift + Subtitle / EQ	 Radio	 TV/Radio /
 [≡♦]	 Zoom / Size	 I/II/I-II	 Audio / Lang I/II
 1	 1	 Vol+	 Vol+
 2	 2	 PR+	 CH+ / Page+
 3	 3	 P.Info	 Info / Angle
 4	 4	 Mute	 Mute / Dimmer
 5	 5	 Vol-	 Vol-
 6	 6	 PR-	 CH- / Page-
 7	 7	 [i+]	 Display / Media
 8	 8	 [<>]	 Picture / Format
 9	 9	 Eco	 Sound / Title
 Recall	 Fav / Marker / PC	 AV Mode	 Smart / List





Original	Replacement	Original	Replacement
 Menu	 Menu / Home	 Option	 Setup / OPT /
 Up	 Up	 Rec	 Rec / Rec Mode
 Left	 Left	 Rec Stop	 Shift + Stop /
 OK	 OK	 Stop	 Stop / Hold
 Right	 Right		
 End	 Exit / Cancel / Clear		
 Down	 Down		
 Back	 Back / Return		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Sleep	 Sleep / Timer		
 Power Down	 Shift + Power		
 <</Rev	 << / Tune-		
 Play	 Play / Slow		
 >>/Fwd	 >> / Tune+		

