

 




 

 

 
 

 


 

 

 


 
 
 
 
 

 

















 

 

 


 


 



Original	Replacement
 On / Standby	 Power
 Open / Close	 Eject / Surround
 Tuner (Band)	 Shift + 6
 ASPM	 Setup / OPT /
 RDS - PTY	 D.Menu / Top
 Display	 Display / Media
 Mute	 Mute / Dimmer
 X-Bass	 Audio / Lang I/II
 Bass / Treble	 Sound / Title
 1	 1
 2	 2
 3	 3
 Memory	 Shift + Smart / List
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear

Original	Replacement
 7	 7
 8	 8
 9	 9
 Clock / Timer	 Shift + Sleep / Timer
 0	 0
 10+	 Guide / EPG / -/-
 Sleep	 Sleep / Timer
 Play Mode	 Play / Slow
 Folder	 Text / Goto
 (Tv Out) / Display iPod / iPhone	 TV/Radio /
 Menu iPod /	 Menu / Home
 Play/Pause iPod / iPhone	 Pause / Step / Freeze
 Display CD / USB	 Shift + Display / Media
 Stop CD / USB	 Stop / Hold
 Play/Pause CD /	 Shift + Play /
 I<< / <<	 I<< / Preset-
 Preset Up	 Up





Original		Replacement		Original		Replacement	
	>> / >>		>> / Preset+				
	Vol -		Vol-				
	Enter		OK				
	Vol +		Vol+				
	Equalizer Mode	 + 	Shift + Audio / Lang I/II				
	Preset Down		Down				
	Demo / Dimmer	 + 	Shift + Mute / Dimmer				
	iPod / iPhone		Smart / List				
	CD	 + 	Shift + 3				
	USB	 + 	Shift + 8				
	Input / Audio / Line		AV / Input / RDS				

