



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	[≡]		Text / Goto		Source		AV / Input / RDS
	[≡?]		Shift + Info / Angle		DTV		Shift + D.Menu / Top Menu
	[...]		Subtitle / EQ		EPG		Guide / EPG / -/-
	[≡+]		Stop / Hold		ESG		Shift + Setup / OPT / Tools
	[≡O]		Sleep / Timer		Radio		TV/Radio /
	[≡◆]		Zoom / Size		▼/O)/I/II/I+II		Shift + Down
	1		1		Vol+		Vol+
	2		2		P+		CH+ / Page+
	3		3		AV Mode		Shift + AV / Input / RDS
	4		4		Mute		Mute / Dimmer
	5		5		Vol-		Vol-
	6		6		P-		CH- / Page-
	7		7		Surround		Eject / Surround
	8		8		DTV Menu		D.Menu / Top
	9		9		List		Smart / List
	Recall		Back / Return		[i+]		Info / Angle





Original	Replacement	Original	Replacement
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	End		Exit / Cancel / Clear
	Down		Down
	Return		Shift + Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	truD		Shift + Text /
	Sleep		Shift + Sleep / Timer
	[<>]		Picture / Format
	OPC		Setup / OPT /
	Action		Display / Media

