 


 




 

 
 








 




 



 

 

 









 







Original	Replacement
	 AV / Input / RDS
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Back / Return
	 Setup / OPT /
	 Smart / List
	 Fav / Marker / PC

Original	Replacement
	 Info / Angle
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Picture / Format
	 CH- / Page-
	 Audio / Lang I/II
	 Sound / Title
	 D.Menu / Top
	 Sleep / Timer
	 Up
	 Left
	 OK
	 Right
	 Menu / Home
	 Down





Original		Replacement	
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Teletext		Text / Goto
	Subtitle		Subtitle / EQ
	Size		Zoom / Size
	Subpage		Eject / Surround
	Index		Display / Media
	Hold	+	Shift + Stop /
	Reveal		TV/Radio /
	Freeze		Pause / Step / Freeze
	I<<		I<< / Preset-
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	>>I		>>I / Preset+

Original		Replacement	

