













 





 



 









 




 




 








 




Original	Replacement
 On/Standby	 Power
 Open/Close	 Eject / Surround
 Tuner(Band)	 Shift + 6
 ASPM	 Sound / Title
 RDS-PTY	 Subtitle / EQ
 Display	 Display / Media
 Mute	 Mute / Dimmer
 X-Bass	 Audio / Lang I/II
 Bass/Treble	 Picture / Format
 1	 1
 2	 2
 3	 3
 Memory	 D.Menu / Top
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear

Original	Replacement
 7	 7
 8	 8
 9	 9
 Clock/Timer	 Shift + Sleep / Timer
 0	 0
 10+	 Guide / EPG / -/--
 Sleep	 Sleep / Timer
 Play Mode	 Red / Netflix / Search
 Folder	 Back / Return
 (Tv Out)/Display iPod/iPhone	 TV/Radio /
 Menu iPod/iPhone	 Menu / Home
 Play/Pause iPod/iPhone	 Shift + Play /
 Display CD/USB	 Smart / List
 Stop CD/USB	 Stop / Hold
 Play/Pause	 Play / Slow
 << Tuning	 << / Tune-
 I<<	 I<< / Preset-





Original	Replacement
 Preset Up	 Shift + >>I / Preset+
 >>I	 >>I / Preset+
 Tuning >>	 >> / Tune+
 Vol-	 Vol-
 Enter	 OK
 Vol+	 Vol+
 Equalizer Mode	 Setup / OPT /
 Preset Down	 Shift + I<< / Preset-
 Demo/Dimmer	 Shift + Mute / Dimmer
 iPod/iPhone	 Shift + 1
 CD	 Shift + 3
 USB	 Shift + 8
 Input/Audio In	 AV / Input / RDS

Original	Replacement

