




 



 

 





 



 





 

 

 

 



 



 
 







 







 



Original	Replacement	Original	Replacement
Power On	Power	Stop	Stop
Standby	Shift + Power	</Pause	Pause
Input	AV	>> /Preset+	>>
Mute	Mute	<</Preset-	<<
Vol Up	Shift + Right	>>/Tune+	>>
Vol Down	Shift + Left	<</Tune-	<<
Volume+	Vol +	Setup/Home	Media
Volume-	Vol -	Test/Disc Menu	Menu
T/V/CH Level	Smart	Dimmer/Return	Back
CH/Album Up	Ch +	Display	Info
CH/Album Down	Ch -	RDM/Room2	Exit
Up	Up	Audio	Options
Down/Search	Down	Surround/Play List >	Green
Sel >	Right	< Surround/Play List	Red
< Sel	Left	Stereo/Play M	TV/R
Enter	Ok	1 / Tuner	1
Play	Play	2 / CD	2











 








 









 

 
 





Original	Replacement	Original	Replacement
 Power On	 Power	 Audio	 Dual
 Standby	 Shift + Power	 Subtitle	 Subt
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right	 Right	 3	 3
 Left	 Left	 4	 4
 Enter	 Ok	 5	 5
 Setup/Home	 Media	 6	 6
 Test/Disc Menu	 Menu	 7	 7
 Play	 Play	 8	 8
 Stop	 Stop	 9	 9
 >>	 >>	 0	 0
 <<	 <<		
 I<<	 I<<		
 >>I	 >>I		
 Display	 Info		
 Dimmer/Return	 Back		






	Original	Replacement	Original	Replacement
	CD			Power
	Play			Play
	Stop			Stop
	Pause			Pause
	I<<			I<<
	>>I			>>I
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0





Original	Replacement	Original	Replacement
 Power On	 Power	 Audio	 Options
 Standby	 Shift + Power	 < Surround/Play List	 Red
 RDM/Room2	 Exit	 Surround/Play List >	 Green
 CH/Album Up	 Ch +	 Stereo/Play M	 TV/R
 CH/Album Down	 Ch -	 Sleep / Dock M.	 Sleep
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 >>	 >>		
 <<	 <<		
 I<<	 I<<		
 >>I	 >>I		
 Test/Disc Menu	 Menu		
 Display	 Info		
 Enter	 Ok		
 Up	 Up		
 Down	 Down		

