



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Info		Info / Angle
	Angle		Shift + Info / Angle
	Copy		Picture / Format
	Zoom		Zoom / Size
	Tv Sys		Smart / List
	Music		Sound / Title
	Setup		Setup / OPT /
	Menu		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Sleep / Timer
	0		0
	Goto		Shift + Text /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	<</FR		<< / Tune-
	>>/FF		>> / Tune+
	A-B		Shift + Yellow / YouTube /
	Repeat		Shift + Green / APP /
	>>I/Next		>>I / Preset+
	Vol+		Vol+
	Play/Pause		Play / Slow
	Vol-		Vol-





Original	Replacement	Original	Replacement
I<</Prev	I<< / Preset-		
Home	D.Menu / Top		
Up	Up		
X/Return	Back / Return		
Left	Left		
Enter	OK		
Right	Right		
Select	Fav / Marker / PC		
Down	Down		
Wuaki TV	Display / Media		
Red	Red / Netflix / Search		
Green/EPG	Green / APP / Repeat		
Green/EPG	Guide / EPG / -/--		
Yellow/TTX	Yellow / YouTube / Repeat		
Yellow/TTX	Text / Goto		
Blue	Blue / Prime Video / Random		

