



Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Screen		Picture / Format
	Presets		Setup / OPT /
	↔		TV/Radio /
	FAV		Shift + Fav / Marker / PC
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/-
	0		0
	Swap		Fav / Marker / PC
	Photo/Music/Movi		D.Menu / Top
	World		Smart / List
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	C		Exit / Cancel / Clear
	Disp.		Display / Media
	Search Mode		Shift + Red / Netflix /
	Return		Back / Return





Original	Replacement
CH+	CH+ / Page+
INFO	Info / Angle
Vol+	Vol+
CH-	CH- / Page-
Mute	Mute / Dimmer
Vol-	Vol-
Rec	Rec / Rec Mode
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow
Stop	Stop / Hold
>>	>> / Tune+
Red/↑/Zoom	Red / Netflix / Search
Red/↑/Zoom	Zoom / Size
Green/↓/Repeat	Green / APP / Repeat

Original	Replacement
Yellow/Root	Yellow / YouTube / Repeat
Blue/Title	Blue / Prime Video / Random

