



 



 









 







 

 



 

 





 

 

 

 













 







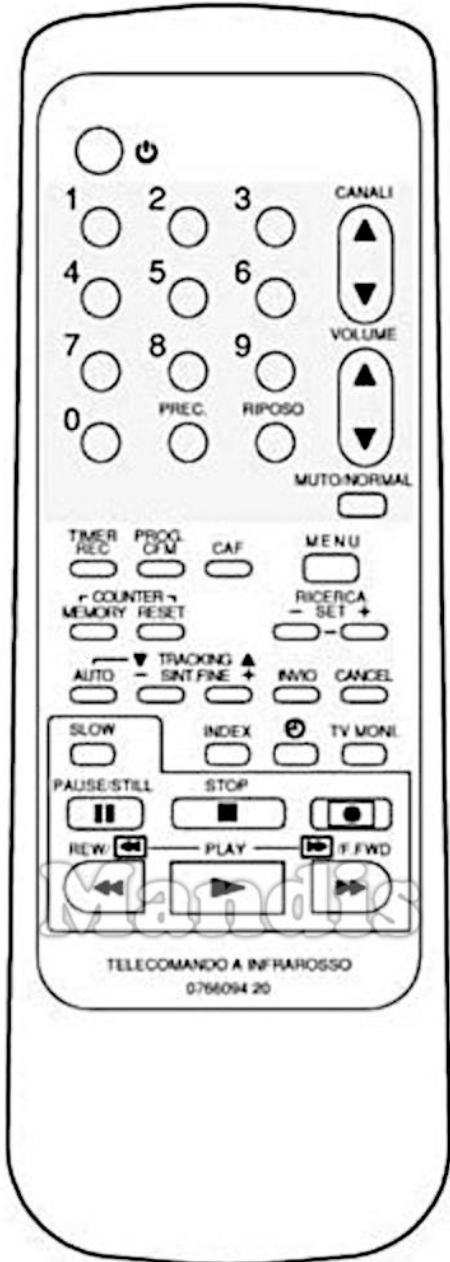 
 















| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Power |  Power |  Muto / Normal |  Mute / Dimmer |
|  1 |  1 |  Timer Rec |  D.Menu / Top |
|  2 |  2 |  Prog. CFM |  TV/Radio / |
|  3 |  3 |  CAF |  Info / Angle |
|  Canali+ |  CH+ / Page+ |  Menu |  Menu / Home |
|  4 |  4 |  Counter |  Red / Netflix / Search |
|  5 |  5 |  Counter Reset |  Green / APP / Repeat |
|  6 |  6 |  Ricerca Set- |  Left |
|  Canali- |  CH- / Page- |  Ricerca Set+ |  Right |
|  7 |  7 |  Auto Tracking |  Smart / List |
|  8 |  8 |  Tracking |  Down |
|  9 |  9 |  Tracking |  Up |
|  Volume+ |  Vol+ |  Invio |  OK |
|  0 |  0 |  Cancel |  Exit / Cancel / Clear |
|  Prec. |  Back / Return |  Slow |  Shift + Play / |
|  Riposo |  Sleep / Timer |  Index |  Picture / Format |
|  Volume- |  Vol- |  Clock |  Setup / OPT / |





| | Original | Replacement | Original | Replacement |
|---|---------------|---|----------|-------------|
|  | TV Moni. |  Display / Media | | |
|  | Pause / Still |  Pause / Step / Freeze | | |
|  | Stop |  Stop / Hold | | |
|  | Rec |  Rec / Rec Mode | | |
|  | Rew |  << / Tune- | | |
|  | Play |  Play / Slow | | |
|  | F.Fwd |  >> / Tune+ | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

