

 

































 



 



 



 


















Original		Replacement		Original		Replacement	
	Power		Power		Pause / Still		Pause / Step / Freeze
	1		1		Left / <<		Left
	2		2		Left / <<		<< / Tune-
	3		3		Left / <<		I<< / Preset-
	4		4		Right / >>		Right
	5		5		Right / >>		>>I / Preset+
	6		6		Right / >>		>> / Tune+
	7		7		Down / Stop		Down
	8		8		Down / Stop		Stop / Hold
	9		9		Enter		OK
	0 / AV		0		Index		Info / Angle
	0 / AV		AV / Input / RDS		Cancel		Exit / Cancel / Clear
	CH/TR. +		CH+ / Page+		Menu		Menu / Home
	CH/TR. -		CH- / Page-		Timer Rec		Sleep / Timer
	Rec / OTR		Rec / Rec Mode		Program		TV/Radio /
	Up / Play		Up		Call		D.Menu / Top
	Up / Play		Play / Slow		Clock / Counter		Red / Netflix / Search




Original
Replacement

	Counter Reset		Green / APP / Repeat
	Zero / Return		Yellow / YouTube / Repeat
	Zero / Return		Back / Return
	Speed SP/LP		Display / Media
	TV / VCR		Smart / List
	Eject		Eject / Surround

Original
Replacement

