


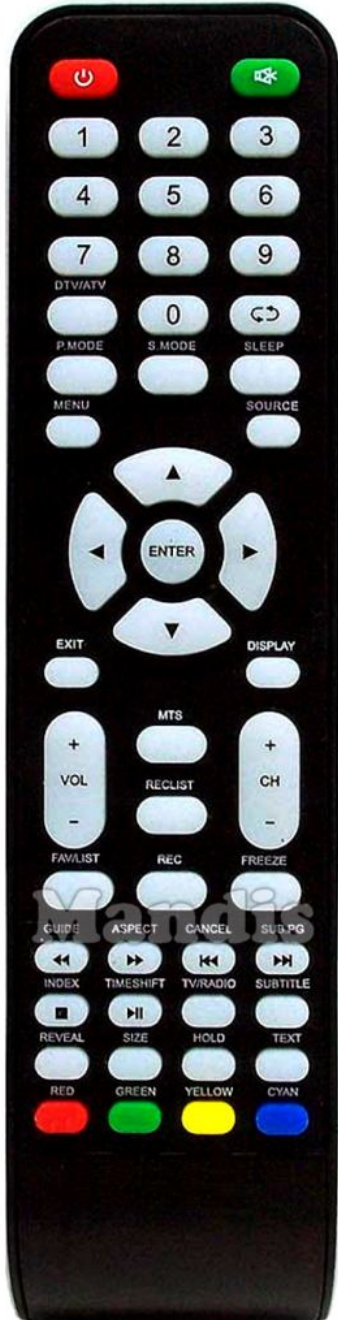

| Original  | Replacement  | Original   | Replacement   |
|---|--|--|---|
|  Power     |  Power              |  Menu       |  Menu / Home           |
|  Mute      |  Mute / Dimmer      |  Source     |  AV / Input / RDS      |
|  1         |  1                  |  Up         |  Up                    |
|  2         |  2                  |  Left       |  Left                  |
|  3         |  3                  |  Enter      |  OK                    |
|  4         |  4                  |  Right      |  Right                 |
|  5         |  5                  |  Down       |  Down                  |
|  6         |  6                  |  Exit       |  Exit / Cancel / Clear |
|  7         |  7                  |  Display    |  Display / Media       |
|  8         |  8                  |  Vol+       |  Vol+                  |
|  9        |  9                 |  Vol-      |  Vol-                 |
|  0       |  0                |  MTS      |  Info / Angle        |
|  DTV/ATV |  D.Menu / Top     |  Rec List |  Smart / List        |
|  Recall  |  Back / Return    |  CH+      |  CH+ / Page+         |
|  P.Mode  |  Picture / Format |  CH-      |  CH- / Page-         |
|  S.Mode  |  Sound / Title    |  FAV/List |  Fav / Marker / PC   |
|  Sleep   |  Sleep / Timer    |  Rec      |  Rec / Rec Mode      |





| Original               | Replacement                   |
|------------------------|-------------------------------|
| Freeze                 | Pause / Step / Freeze         |
| Guide                  | Guide / EPG / --              |
| <<                     | << / Tune-                    |
| >> / Aspect            | >> / Tune+                    |
| >> / Aspect            | Shift + Picture / Format      |
| << / Cancel            | << / Preset-                  |
| << / Cancel            | Shift + Exit / Cancel / Clear |
| >>  / Sub.PG           | >>  / Preset+                 |
| Stop / Index           | Stop / Hold                   |
| Play/Pause / Timeshift | Play / Slow                   |
| Tv/Radio               | TV/Radio /                    |
| Subtitle               | Subtitle / EQ                 |
| Reveal                 | Eject / Surround              |
| Size                   | Zoom / Size                   |
| Hold                   | Shift + Stop /                |
| Text                   | Text / Goto                   |
| Red                    | Red / Netflix / Search        |

| Original | Replacement                 |
|----------|-----------------------------|
| Green    | Green / APP / Repeat        |
| Yellow   | Yellow / YouTube / Repeat   |
| Cyan     | Blue / Prime Video / Random |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |
|          |                             |











| Original  | Replacement | Original  | Replacement           |
|---|-------------|---|-----------------------|
|      | Power       |      | Power                 |
|      | Mute        |      | Mute / Dimmer         |
|      | 1           |      | 1                     |
|      | 2           |      | 2                     |
|      | 3           |      | 3                     |
|      | 4           |      | 4                     |
|      | 5           |      | 5                     |
|      | 6           |      | 6                     |
|      | 7           |      | 7                     |
|     | 8           |     | 8                     |
|    | 9           |    | 9                     |
|    | 0           |    | 0                     |
|    | DTV/ATV     |    | D.Menu / Top          |
|    | Recall      |    | Back / Return         |
|    | P.Mode      |    | Picture / Format      |
|    | S.Mode      |    | Sound / Title         |
|    | Sleep       |    | Sleep / Timer         |
|    | Menu        |    | Menu / Home           |
|    | Source      |    | AV / Input / RDS      |
|    | Up          |    | Up                    |
|    | Left        |    | Left                  |
|    | Enter       |    | OK                    |
|    | Right       |    | Right                 |
|    | Down        |    | Down                  |
|    | Exit        |    | Exit / Cancel / Clear |
|    | Display     |    | Display / Media       |
|   | Vol+        |   | Vol+                  |
|  | Vol-        |  | Vol-                  |
|  | MTS         |  | Info / Angle          |
|  | Rec List    |  | Smart / List          |
|  | CH+         |  | CH+ / Page+           |
|  | CH-         |  | CH- / Page-           |
|  | FAV/List    |  | Fav / Marker / PC     |
|  | Rec         |  | Rec / Rec Mode        |





| Original   | Replacement   | Original   | Replacement   |
|--|---|--|---|
|  Freeze                 |  Pause / Step / Freeze         |  Green  |  Green / APP / Repeat        |
|  Guide                  |  Guide / EPG / -/-             |  Yellow |  Yellow / YouTube / Repeat   |
|  <<                     |  << / Tune-                    |  Cyan   |  Blue / Prime Video / Random |
|  >> / Aspect            |  >> / Tune+                    |  |   |
|  >> / Aspect            |  Shift + Picture / Format      |  |   |
|   << / Cancel           |   << / Preset-                 |  |   |
|   << / Cancel           |  Shift + Exit / Cancel / Clear |  |   |
|  >>  / Sub.PG           |  >>  / Preset+                 |  |   |
|  Stop / Index           |  Stop / Hold                   |  |   |
|  Play/Pause / Timeshift |  Play / Slow                   |  |   |
|  Tv/Radio              |  TV/Radio /                   |  |   |
|  Subtitle             |  Subtitle / EQ               |  |   |
|  Reveal               |  Eject / Surround            |  |   |
|  Size                 |  Zoom / Size                 |  |   |
|  Hold                 |  Shift + Stop /              |  |   |
|  Text                 |  Text / Goto                 |  |   |
|  Red                  |  Red / Netflix / Search      |  |   |

| Original  | Replacement   |
|---|---|
|  |  |
|  |  |
|  |  |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |
|   |   |

