










 








 
 

 



 

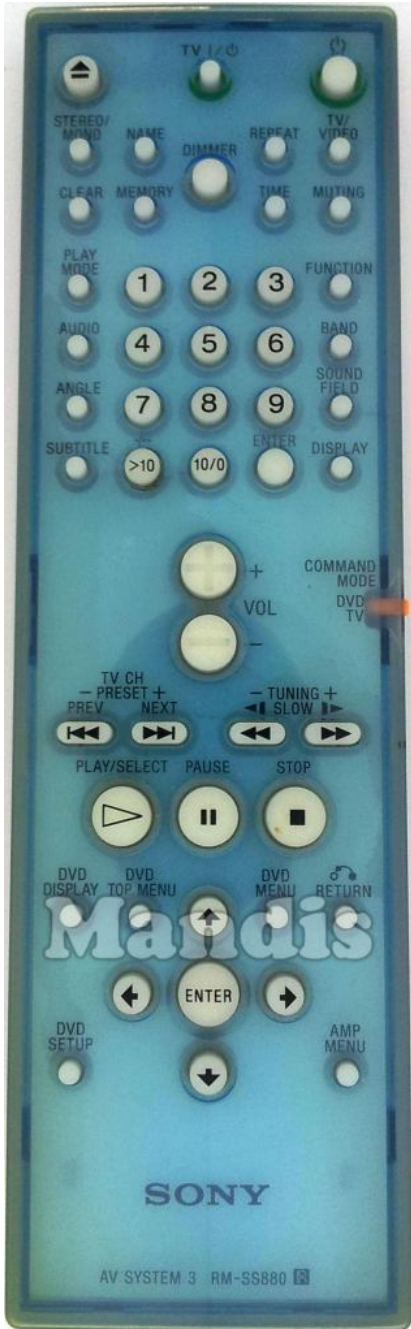 

 
 

 



 



 



 

 

 

 

 



 



 

 



 

 

 

 



 

 
 
 

 

 



 



 







Original	Replacement	Original	Replacement
	 Eject / Surround		 3
	 +  Shift + Power		 +  Shift + 3
	 Power		 +  Shift + Setup / OPT / Tools
	 +  Shift + Sound / Title		 Audio / Lang I/II
	 AV / Input / RDS		 4
	 +  Shift + Mute / Dimmer		 +  Shift + 4
	 Green / APP / Repeat		 5
	 TV/Radio /		 +  Shift + 5
	 Exit / Cancel / Clear		 6
	 +  Shift + D.Menu / Top Menu		 +  Shift + 6
	 Sleep / Timer		 Picture / Format
	 Mute / Dimmer		 Info / Angle
	 Play / Slow		 7
	 1		 +  Shift + 7
	 +  Shift + 1		 8
	 2		 +  Shift + 8
	 +  Shift + 2		 9





Original	Replacement	Original	Replacement
	 Shift + 9		 << / Tune-
	 Sound / Title		 >> / Tune+
	 Subtitle / EQ		 Shift + Play /
	 Guide / EPG / -/--		 Pause / Step / Freeze
	 Fav / Marker / PC		 Stop / Hold
	 0		 Shift + Display / Media
	 Shift + 0		 Menu / Home
	 Shift + OK		 Up
	 Display / Media		 D.Menu / Top
	 Vol+		 Back / Return
	 Shift + Vol+		 Left
	 Vol-		 OK
	 Shift + Vol-		 Shift + Down
	 I<< / Preset-		 Right
	 Shift + I<< / Preset-		 Setup / OPT /
	 >>I / Preset+		 Shift + Menu /
	 Shift + >>I / Preset+		 Down

