



Original	Replacement
Open/Close	Eject / Surround
HDD	Shift + 7
DVD	Shift + 2
Power	Power
1	1
2	2
3	3
Prog +	CH+ / Page+
4	4
5	5
6	6
Prog -	CH- / Page-
7	7
8	8
9	9
Input Select	AV / Input / RDS
Audio	Audio / Lang I/II

Original	Replacement
0	0
Subtitle	Subtitle / EQ
TV / DVD	TV/Radio /
Red / Top Menu	Red / Netflix / Search
Red / Top Menu	D.Menu / Top
Green / Menu	Green / APP / Repeat
Green / Menu	Menu / Home
Yellow / Chapter Mark	Yellow / YouTube / Repeat
Blue / Erase Mark	Blue / Prime Video / Random
System Menu	Smart / List
Title List	Sound / Title
TV Guide	Guide / EPG / -/--
Schedule	Fav / Marker / PC
Up	Up
Info	Info / Angle
Left	Left
Enter	OK





Original	Replacement
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 I<< / Day -	 I<< / Preset-
 ←· Page	 Shift + Left
 Page →	 Shift + Right
 >>I / Day +	 >>I / Preset+
 << / <II / <I	 << / Tune-
 Play	 Play / Slow
 I> / II> / >>	 >> / Tune+
 Display	 Display / Media
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Rec Stop	 Shift + Stop /
 → / Synchro Rec	 Shift + OK

Original	Replacement
 Rec Mode	 Shift + Rec / Rec Mode
 TV Vol +	 Vol+
 TV Prog +	 Shift + CH+ /
 TV Power	 Shift + Power
 TV Vol -	 Vol-
 TV Prog -	 Shift + CH- /
 TV Input	 Shift + AV / Input / RDS

