


 


	Original	Replacement		Original	Replacement
	Power	 Power		D Zoom-	 - / Stop
	Input	 Source		Vol+	 Vol + / Page +
	APA	 Mode		Vol-	 Vol - / Page -
	Eco Mode	 Eco / Aspect		Freeze	 Freeze / Timer
	Menu	 Menu		Blank	 Blank / Mute
	Reset	 Shift + Power		Muting	 Shift + Blank / Mute
	Up	 Up			
	Left	 Left			
	Enter	 Enter			
	Right	 Right			
	Down	 Down			
	Return	 Auto			
	Aspect	 Shift + Eco / Aspect			
	Keystone	 Shift + Down			
	Keystone	 Shift + Up			
	Pattern	 Comp / Video			
	D Zoom+	 + / Play			

