

 
 
 



 



 
 

 



 
 
 

 


 
 
 
 

 
 












 

 
 

 
 




 
 


 
 
 








Original		Replacement		Original		Replacement	
	Power		Power		Info		Info
	Mute		Mute		EPG		Guide
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		Vol +		Vol +
	9		9		Vol -		Vol -
	0		0		P +		Shift + Ch +
	TV / R		TV/R		List		List
	Home		Smart		P -		Shift + Ch -
	FAV		Pre Ch		CH +		Ch +
	Back		Back		CH -		Ch -
	Audio		Dual		OPT		Options





Original	Replacement	Original	Replacement
 Text	 Text		
 SUB	 Subt		
 Message	 Format		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 <<	 <<		
 >>	 >>		
 Stop	 Stop		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

