 



 

































 



 

 





 

 







 











Original		Replacement		Original		Replacement	
	Standby		Power		Down / CH -		Down
	Mute		Mute / Dimmer		Timeshift		Sleep / Timer
	PG +		>>I / Preset+		1		1
	PG -		I<< / Preset-		2		2
	DTV / VCR		Smart / List		3		3
	Vol +		Vol+		EPG		Guide / EPG / -/--
	Info		Info / Angle		4		4
	Vol -		Vol-		5		5
	Menu		Menu / Home		6		6
	Up / CH +		CH+ / Page+		Recall		Back / Return
	Up / CH +		Up		7		7
	Exit		Exit / Cancel / Clear		8		8
	Left		Left		9		9
	OK		OK		0		0
	Right		Right		Audio		Audio / Lang I/II
	Record		Rec / Rec Mode		TV / Radio		TV/Radio /
	Down / CH -		CH- / Page-		FAV		Fav / Marker / PC





Original		Replacement		Original		Replacement	
	File		Display / Media				
	TTX		Text / Goto				
	Subtitle		Subtitle / EQ				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Red / Stop		Red / Netflix / Search				
	Red / Stop		Stop / Hold				
	Green / Step		Green / APP / Repeat				
	Green / Step		Shift + Pause / Step / Step /				
	Yellow / Pause		Yellow / YouTube / Repeat				
	Yellow / Pause		Pause / Step / Freeze				
	Blue / Play		Blue / Prime Video / Random				
	Blue / Play		Play / Slow				

