



Original	Replacement	Original	Replacement
Standby/On	Power	Up/PTY Select	Up
Sleep	Sleep / Timer	P.Scan	Smart / List
Video 1	Shift + 4	Left/EON TA	Left
Video 2	Shift + 8	Enter/RDS	OK
Video 3	Shift + 9	Right/EON PTY	Right
EXT In	Shift + 2	Repeat 1/All	Green / APP / Repeat
Tuner	Shift + 6	Down/Search	Down
CD	Shift + 3	Dimmer	Shift + Mute / Dimmer
AUX	Shift + 7	<<	<< / Tune-
Tape	Shift + 5	>>	>> / Tune+
Level+	CH+ / Page+	I<<	I<< / Preset-
CH Sel	Fav / Marker / PC	Stop	Stop / Hold
Volume+	Vol+	>>I	>>I / Preset+
Level-	CH- / Page-	Pause	Pause / Step / Freeze
Muting	Mute / Dimmer	Play	Play / Slow
Volume-	Vol-	Auto	D.Menu / Top
T.Tone	Display / Media	< DSP	Shift + Left





Original	Replacement
DSP >	SHIFT + [Right Arrow] Shift + Right
Stereo	LANG I/II AUDIO Audio / Lang I/II
SP Setup	OPT-TOOLS SETUP Setup / OPT /
< Select	SHIFT + [TUNE-] Shift + << /
Select >	SHIFT + [TUNE+] Shift + >> /
Parameter	NETFLIX SEARCH Red / Netflix / Search
1	TV 1 1
2	DVD 2 2
3	CD - STB 3 3
4	VIDEO 4 4
5	TAPE 5 5
6	TUNER 6 6
7	AUX - HDD 7 7
8	USB 8 8
9	BLUETOOTH 9 9
0	HDMI - BAT 0 0
Cinema EQ	EQ SUBTITLE Subtitle / EQ

Original	Replacement
DYNAMIC RANGE	SURROUND Eject / Surround
PAL/NTSC	FORMAT PICTURE Picture / Format

