




 






 





 


 
 





Original	Replacement	Original	Replacement
 TV	 TV/R	 Tv/AV	 AV
 CD	 Yellow	 Pro Logic	 Media
 DVD	 Blue	 Center-	 Shift + Ch -
 Tuner/Band	 Green	 Center+	 Shift + Ch +
 Tape	 Red	 Test	 Back
 VCR	 Smart	 Surround +	 Ch +
 Vol+	 Vol +	 Surround -	 Ch -
 Vol-	 Vol -	 Power TV	 Power
 Muting	 Mute	 Tv Vol Up	 Shift + Vol +
 Up	 Up	 Tv Vol Down	 Shift + Vol -
 Down	 Down	 1 Tv	 1
 Right	 Right	 2 Tv	 2
 Left	 Left	 3 Tv	 3
 Select	 Ok	 4 Tv	 4
 Menu	 D. Menu	 5 Tv	 5
 Display	 Info	 6 Tv	 6
 Disc/Deck 1/2	 Menu	 7 Tv	 7

 










 


 

 









 




 






 



 




 








 


 




Original		Replacement		Original		Replacement	
	8 Tv		8				
	9 Tv		9				
	0 Tv		0				
	>10/-/- Tv		Guide				





Original	Replacement	Original	Replacement
 Power DVD	 Power	 Left	 Left
 TV	 TV/R	 Select	 Ok
 VCR	 Smart	 Test	 Back
 Tuner/Band	 Green	 Pro Logic	 Media
 Tape	 Red	 Center-	 Shift + Ch -
 CD	 Yellow	 Center+	 Shift + Ch +
 DVD	 Blue	 Surround +	 Ch +
 Play DVD	 Play	 Surround -	 Ch -
 I<</<< DVD	 <<	 1 DVD	 1
 Stop DVD	 Stop	 2 DVD	 2
 >>/>>I DVD	 >>	 3 DVD	 3
 Disc/Deck 1/2	 Menu	 4 DVD	 4
 Display	 Info	 5 DVD	 5
 Menu	 D. Menu	 6 DVD	 6
 Up	 Up	 7 DVD	 7
 Down	 Down	 8 DVD	 8
 Right	 Right	 9 DVD	 9





Original	Replacement	Original	Replacement
 0 DVD	 0		
 >10/-/-- DVD	 GUIDE		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Muting	 Mute		





Original	Replacement
 Power CD	 Power
 TV	 TV/R
 VCR	 Smart
 CD	 Yellow
 DVD	 Blue
 Tape	 Red
 Tuner/Band	 Green
 Stop CD	 Stop
 I<</<< CD	 <<
 >>/>>I CD	 >>
 Play CD	 Play
 Menu	 D. Menu
 Display	 Info
 Disc/Deck 1/2	 Menu
 Up	 Up
 Down	 Down
 Right	 Right

Original	Replacement
 Left	 Left
 Select	 Ok
 Test	 Back
 Pro Logic	 Media
 Center-	 Shift + Ch -
 Center+	 Shift + Ch +
 Surround +	 Ch +
 Surround -	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Power Tape	 Shift + Power
 Stop Tape	 Shift + Stop
 Play Tape	 Shift + Play
 I<</<< Tape	 Shift + <<
 >>/>>I Tape	 Shift + >>
 Disc/Deck 1/2	 Shift + Menu



Tape

 






 

 

 



 


 
 
 


 

 

 







 



 

















 
 




 



 


	Original	Replacement		Replacement
	1 CD-Tape		1	1
	2 CD-Tape		2	2
	3 CD-Tape		3	3
	4 CD-Tape		4	4
	5 CD-Tape		5	5
	6 CD-Tape		6	6
	7 CD-Tape		7	7
	8 CD-Tape		8	8
	9 CD-Tape		9	9
	0 CD-Tape		0	0
	>10/-/- CD-Tape		GUIDE	Guide
	Direct Tuning/Disc Enter		REPEAT TEXT	Text

	Original	Replacement



 



Original	Replacement	Original	Replacement
 Power VCR	 Power	 7 VCR	 7
 VCR	 Smart	 8 VCR	 8
 Tape	 Red	 9 VCR	 9
 TV	 TV/R	 0 VCR	 0
 CD	 Yellow	 >10/-/- VCR	 Guide
 DVD	 Blue	 Direct Tuning/Disc Enter	 Text
 Tuner/Band	 Green	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Select	 Ok
 4 VCR	 4	 Disc/Deck 1/2	 Menu
 5 VCR	 5	 Display	 Info
 6 VCR	 6	 Menu	 D. Menu





Original	Replacement
 Test	 Back
 Pro Logic	 Media
 Center-	 Shift + Ch -
 Center+	 Shift + Ch +
 Surround +	 Ch +
 Surround -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6
 7 Tuner/Band	 Shift + 7
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9
 0 Tuner/Band	 Shift + 0

Original	Replacement
 >10/-/-	 Shift + Guide

