



| Original | Replacement | | |
|----------|-------------|--|--------------------|
| | Mute | | Mute / Dimmer |
| | Power | | Power |
| | More | | Display / Media |
| | ? | | Guide / EPG / -/-- |
| | Sleep | | Sleep / Timer |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Zoom | | Zoom / Size |
| | 0 / AV | | 0 |
| | 0 / AV | | AV / Input / RDS |

| Original | Replacement | | |
|----------|-------------|--|-----------------------------|
| | OPT | | Setup / OPT / |
| | SFI | | Picture / Format |
| | TV / Radio | | TV/Radio / |
| | Genre | | Smart / List |
| | Rec | | Rec / Rec Mode |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Red | | Red / Netflix / Search |
| | Up | | Up |
| | Blue | | Blue / Prime Video / Random |
| | Left | | Left |
| | OK | | OK |
| | Right | | Right |
| | Exit | | Exit / Cancel / Clear |
| | Info | | Info / Angle |
| | Down | | Down |
| | << | | << / Tune- |





| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  |  Stop / Hold | | |
|  |  Play / Slow | | |
|  |  Pause / Step / Freeze | | |
|  |  >> / Tune+ | | |
|  |  CH- / Page- | | |
|  |  CH+ / Page+ | | |
|  |  Vol- | | |
|  |  Vol+ | | |
|  |  Text / Goto | | |
|  |  Shift + Pause / Step / Still | | |
|  |  Sound / Title | | |
|  |  D.Menu / Top | | |
|  |  Menu / Home | | |
|  |  Shift + 0 | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement |
|----------|-------------------|
| | Mute / Dimmer |
| | Power |
| | Fav / Marker / PC |
| | Smart / List |
| | Sleep / Timer |
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | Zoom / Size |
| | 0 |
| | AV / Input / RDS |

| Original | Replacement |
|----------|-----------------------------|
| | Setup / OPT / |
| | Display / Media |
| | TV/Radio / |
| | D.Menu / Top |
| | Rec / Rec Mode |
| | Green / APP / Repeat |
| | Yellow / YouTube / Repeat |
| | Red / Netflix / Search |
| | Up |
| | Blue / Prime Video / Random |
| | Left |
| | OK |
| | Right |
| | Exit / Cancel / Clear |
| | Info / Angle |
| | Down |
| | << / Tune- |







 





 



 





 



 





 



 


 
 
 
 
 


 


 
 
 
 



 





 



 





| Original | Replacement | Original | Replacement |
|----------|-----------------------|----------|-------------|
| | Stop / Hold | | |
| | Play / Slow | | |
| | >> / Tune+ | | |
| | CH- / Page- | | |
| | CH+ / Page+ | | |
| | Vol- | | |
| | Vol+ | | |
| | Text / Goto | | |
| | Pause / Step / Freeze | | |
| | Sound / Title | | |
| | Picture / Format | | |
| | Menu / Home | | |
| | + Shift + 0 | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |













 

 

 

 
 

 
 
 

 

 

 
 
 


| Original | Replacement |
|---|--|
|  |  Mute / Dimmer |
|  |  Power |
|  |  Display / Media |
|  |  Guide / EPG / -/-- |
|  |  Sleep / Timer |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Zoom / Size |
|  |  0 |
|  |  AV / Input / RDS |

| Original | Replacement |
|---|---|
|  |  Setup / OPT / |
|  |  Picture / Format |
|  |  TV/Radio / |
|  |  Smart / List |
|  |  Rec / Rec Mode |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Red / Netflix / Search |
|  |  Up |
|  |  Blue / Prime Video / Random |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Exit / Cancel / Clear |
|  |  Info / Angle |
|  |  Down |
|  |  << / Tune- |





| Original | Replacement |
|---|---|
|  |  Stop / Hold |
|  |  Play / Slow |
|  |  Pause / Step / Freeze |
|  |  >> / Tune+ |
|  |  CH- / Page- |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  Vol+ |
|  |  Text / Goto |
|  |  +  Shift + Pause / Step / |
|  |  Sound / Title |
|  |  D.Menu / Top |
|  |  Menu / Home |
|  |  +  Shift + 0 |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

