

 

 

 











 











 

 







 



















 



 

 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Rec		Rec / Rec Mode
	0		0
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	EPG		Guide / EPG / -/--
	Up		Up
	Recall		Fav / Marker / PC
	I<<		I<< / Preset-
	Left		Left
	OK		OK
	Right		Right
	>>I		>>I / Preset+
	Zurück		Back / Return
	Down		Down
	Info		Info / Angle
	P+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Vol+		Vol+



