 




 

 
 

 













 





























| Original | Replacement |
|--|---|
|  On/Standby |  Power |
|  Open/Close |  Eject / Surround |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Preset |  Zoom / Size |
|  Clock |  Shift + Sleep / Timer |
|  Timer |  AV / Input / RDS |
|  Repeat |  Green / APP / Repeat |
|  Random |  Blue / Prime Video / Random |

| Original | Replacement |
|---|---|
|  Intro |  TV/Radio / |
|  EQ |  Subtitle / EQ |
|  Mono/ST |  Audio / Lang I/II |
|  Sleep |  Sleep / Timer |
|  Mute |  Mute / Dimmer |
|  I<</<</Tuning |  << / Tune- |
|  >>/>>/Tuning |  >> / Tune+ |
|  Folder- |  CH- / Page- |
|  Folder+ |  CH+ / Page+ |
|  Preset Up |  >>I / Preset+ |
|  Preset Down |  I<< / Preset- |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  Enter |  OK |
|  CD |  Shift + 3 |
|  USB |  Shift + 8 |
|  Tuner/Dab |  Shift + 6 |



