


 








Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	V+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Replacement	Original	Replacement
	V-		Vol-
	Nothing		Smart / List
	P-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Photo/Movie/Musi		Display / Media
	Guide		Guide / EPG / -/-
	*/O		Picture / Format
	*/Q		Setup / OPT /





Original		Replacement		Original		Replacement	
	[=]		Text / Goto				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Lang		Audio / Lang I/II				
	[=]..		Subtitle / EQ				
	[-o-]		Zoom / Size				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

