


| Original |              | Replacement |                       | Original |              | Replacement |                       |
|----------|--------------|-------------|-----------------------|----------|--------------|-------------|-----------------------|
|          | Standby      |             | Power                 |          | Title / TTX  |             | Text / Goto           |
|          | Mute         |             | Mute / Dimmer         |          | Source       |             | AV / Input / RDS      |
|          | Play         |             | Play / Slow           |          | Menu / PBC   |             | Menu / Home           |
|          | Pause        |             | Pause / Step / Freeze |          | Up           |             | Up                    |
|          | Stop         |             | Stop / Hold           |          | Left / Fav-  |             | Left                  |
|          | Rec          |             | Rec / Rec Mode        |          | Enter        |             | OK                    |
|          | <<           |             | << / Tune-            |          | Right / Fav+ |             | Right                 |
|          | >>           |             | >> / Tune+            |          | Clear        |             | Exit / Cancel / Clear |
|          | I<<          |             | I<< / Preset-         |          | Down         |             | Down                  |
|          | >>I          |             | >>I / Preset+         |          | Return       |             | Back / Return         |
|          | Language     |             | Audio / Lang I/II     |          | Vol+         |             | Vol+                  |
|          | SUBT / RIP   |             | Subtitle / EQ         |          | L/R          |             | Smart / List          |
|          | Open / Close |             | Eject / Surround      |          | Vol-         |             | Vol-                  |
|          | Zoom         |             | Zoom / Size           |          | OSD          |             | Display / Media       |
|          | Time         |             | Sleep / Timer         |          | 1            |             | 1                     |
|          | TV / Radio   |             | TV/Radio /            |          | 2            |             | 2                     |
|          | Setup        |             | Setup / OPT /         |          | 3            |             | 3                     |

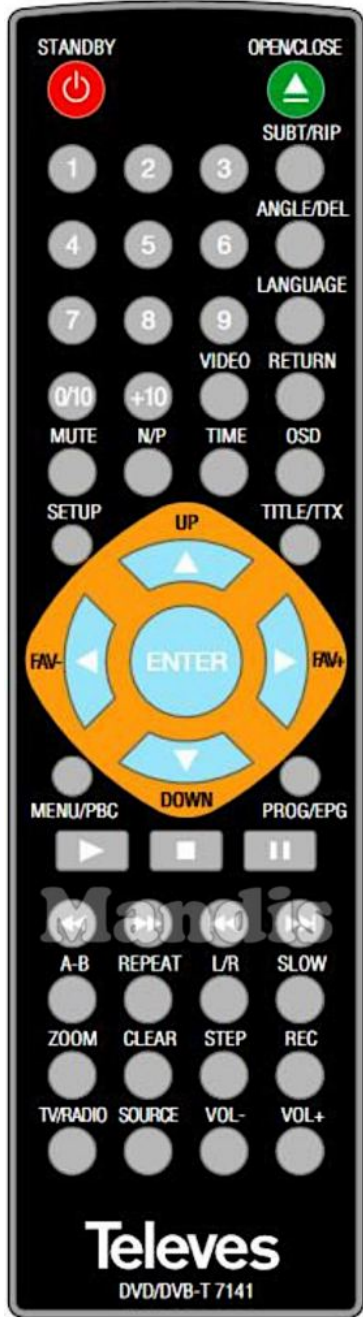



| Original |             | Replacement |                            | Original |  | Replacement |  |
|----------|-------------|-------------|----------------------------|----------|--|-------------|--|
|          | 4           |             | 4                          |          |  |             |  |
|          | 5           |             | 5                          |          |  |             |  |
|          | 6           |             | 6                          |          |  |             |  |
|          | 7           |             | 7                          |          |  |             |  |
|          | 8           |             | 8                          |          |  |             |  |
|          | 9           |             | 9                          |          |  |             |  |
|          | +10         |             | Guide / EPG / -/--         |          |  |             |  |
|          | 0/10        |             | 0                          |          |  |             |  |
|          | Repeat      |             | Green / APP / Repeat       |          |  |             |  |
|          | A-B         |             | Yellow / YouTube / Repeat  |          |  |             |  |
|          | Slow        |             | Shift + Play /             |          |  |             |  |
|          | Step        |             | Shift + Pause / Step /     |          |  |             |  |
|          | Prog / EPG  |             | Shift + TV/Radio / Program |          |  |             |  |
|          | Angle / Del |             | Shift + Back / Return      |          |  |             |  |
|          | N/P         |             | Shift + Display / Media    |          |  |             |  |
|          | Video       |             | Shift + 4                  |          |  |             |  |
|          | Prog / EPG  |             | Shift + Guide / EPG / -/-- |          |  |             |  |

