



























 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Nicam	 Setup / OPT /

Original	Replacement
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Info	 Info / Angle
 CH-	 CH- / Page-
 Vol-	 Vol-
 Media	 Display / Media
 Freeze	 Shift + Pause / Step /
 Aspect	 Shift + Picture / Format
 EPG	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Replacement
Exit	Exit / Cancel / Clear
Text	Text / Goto
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop/Hold	Stop / Hold
<<	<< / Tune-
Size	Zoom / Size
>>/Reveal	>> / Tune+
I<</Index	I<< / Preset-
>>I/Subpage	>>I / Preset+
Lang	Audio / Lang I/II
Subtitle	Subtitle / EQ
Rec	Rec / Rec Mode
R.List	Smart / List
TV/Radio	TV/Radio /
Timeshift	D.Menu / Top
Red	Red / Netflix / Search

Original	Replacement
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

