



Original	Replacement
 Mute	 Mute / Dimmer
 [<>]	 Picture / Format
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 Swap	 Back / Return
 Swap	 D.Menu / Top
 PC	 Fav / Marker / PC

Original	Replacement
 TV	 TV/Radio /
 Menu	 Menu / Home
 Text / Mix	 Text / Goto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [i]	 Info / Angle





Original		Replacement	
[?]	[?]	LIST SMART	Smart / List
[+]	[+]	SIZE ZOOM	Zoom / Size
[◆]	[◆]	MEDIA DISPLAY	Display / Media
[≡x]	[≡x]	SURROUND	Eject / Surround
[:≡]	[:≡]	GUIDE EPG	Guide / EPG / -/--
[]	[]	EQ SUBTITLE	Subtitle / EQ
[♪]	[♪]	TITLE SOUND	Sound / Title

Original		Replacement	

