












 














 








Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DVD RTN		Shift + 2
	Input		AV / Input / RDS
	Audio A/D		Audio / Lang I/II
	Mute		Mute / Dimmer
	Vol +		Vol+
	Vol -		Vol-
	P +		CH+ / Page+
	P -		CH- / Page-
	Menu / DVD		Menu / Home
	Exit / Back		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Guide / Top Menu		D.Menu / Top
	Guide / Top Menu		Shift + D.Menu / Top Menu
	TV Fav/Radio / Setup		TV/Radio /
	TV Fav/Radio / Setup		Shift + TV/Radio / Program
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





 

 

 







 

 

 









 



 

 



 




 






 

 

 

 

 

 

 







Original	Replacement	Original	Replacement
 Video Format	 +  Shift + 4		
 Aspect	 Picture / Format		
 Index i+	 Info / Angle		
 Text / Mix	 Text / Goto		
 Open/Close / Subtitle	 Eject / Surround		
 Open/Close / Subtitle	 +  Shift + Eject / Surround		
 Stop / Dual I/II	 Stop / Hold		
 Stop / Dual I/II	 +  Shift + Stop /		
 Play	 Play / Slow		
 Pause / Step / [▼]	 Pause / Step / Freeze		
 I<< / Reveal	 I<< / Preset-		
 << / Hold	 +  Shift + << /		
 << / Hold	 << / Tune-		
 >> / Size	 +  Shift + >> /		
 >> / Size	 >> / Tune+		
 >>I / Cancel	 +  Shift + >>I / Preset+		
 >>I / Cancel	 >>I / Preset+		





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit / Back		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Top Menu		D.Menu / Top
	Down		Down
	Set Up		Setup / OPT /
	[<>]		Picture / Format
	→ / ←		Display / Media
	[i+]/[≡i]		Info / Angle
	Text/Audio		Text / Goto
	Open/Close/Subtit		Eject / Surround
	Stop/O /I		Stop / Hold
	Play/[≡o]		Play / Slow
	Pause/Step/[▽]		Pause / Step / Freeze
	I<</[≡?]		I<< / Preset-
	<</[≡+]		<< / Tune-





Original	Replacement	Original	Replacement
>>/[♦]	>> / Tune+		
>>I/[O]/[≡x]	>>I / Preset+		

