



| Original | | Replacement | | Original | | Replacement | |
|---|--------------|---|---------|---|-----------------|---|----------------|
|  | Standby |  | Power |  | Prog- |  | Ch - |
|  | Open/Close |  | Eject |  | Timer Prog |  | Sleep |
|  | Input Select |  | AV |  | Variable Replay |  | Pre Ch |
|  | HDMI |  | TV/R |  | Variable Skip |  | Shift + Pre Ch |
|  | 1 |  | 1 |  | Top Menu |  | Menu |
|  | 2 |  | 2 |  | Disc Menu |  | D. Menu |
|  | 3 |  | 3 |  | Up |  | Up |
|  | 4 |  | 4 |  | Left |  | Left |
|  | 5 |  | 5 |  | Enter |  | Ok |
|  | 6 |  | 6 |  | Right |  | Right |
|  | 7 |  | 7 |  | Down |  | Down |
|  | 8 |  | 8 |  | Display |  | Info |
|  | 9 |  | 9 |  | Return |  | Shift + Back |
|  | 0 |  | 0 |  | Mode |  | Yellow |
|  | Setup |  | Options |  | Search |  | Blue |
|  | Clear |  | Exit |  | << |  | << |
|  | Prog+ |  | Ch + |  | Play |  | Play |





| Original | | Replacement | | Original | | Replacement | |
|----------|-----------------|-------------|---------------|----------|--|-------------|--|
| | >> | | >> | | | | |
| | << | | << | | | | |
| | Stop | | Stop | | | | |
| | >> | | >> | | | | |
| | Pause | | Pause | | | | |
| | VCR | | Shift + 1 | | | | |
| | HDD | | Shift + 2 | | | | |
| | DVD | | Shift + 3 | | | | |
| | Time Slip | | Shift + Sleep | | | | |
| | Dubbing | | Back | | | | |
| | Rec Mode | | Shift + Rec | | | | |
| | Rec | | Rec | | | | |
| | Subtitle | | Subt | | | | |
| | 1.3x/0.8x PPlay | | Format | | | | |
| | O))/Audio | | Dual | | | | |
| | Sat Link | | 3D | | | | |
| | | | | | | | |

