








 

 













Original	Replacement
 Display	 Display / Media
 Eject	 Eject / Surround
 On/Standby	 Power
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 TRK Up	 Vol+
 I.Select	 Yellow / YouTube / Repeat
 0	 0

Original	Replacement
 Count.RST	 Red / Netflix / Search
 TRK Down	 Vol-
 F.ADV	 Text / Goto
 Index	 Info / Angle
 Count.TR	 Green / APP / Repeat
 CLR/RST	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Rec	 Rec / Rec Mode
 Timer Rec	 Sleep / Timer
 Play/Up	 Play / Slow
 Play/Up	 Up
 <</Left	 Left
 <</Left	 << / Tune-
 >>/Right	 Right
 >>/Right	 >> / Tune+
 I>/Slow	 Shift + Play /
 Stop/Down	 Stop / Hold





Original	Replacement	Original	Replacement
 Stop/Down	 Down		
 Pause/Still/OK	 Pause / Step / Freeze		
 Pause/Still/OK	 OK		
 SP/LP	 Setup / OPT /		
 Prog.	 TV/Radio /		
 Audio	 Audio / Lang I/II		
 Tv/Video	 Smart / List		
 A.Dub	 Sound / Title		
 SAT/Moni.	 D.Menu / Top		
 Cont.Sat.	 Zoom / Size		
 Picture	 Picture / Format		

Original	Replacement

