





Original	Replacement
 Power	 Power
 Open / Close	 Eject / Surround
 OSD	 Display / Media
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Angle	 Info / Angle
 7	 7
 8	 8
 9	 9
 Language	 Audio / Lang I/II
 R/L	 Blue / Prime Video / Random
 0	 0

Original	Replacement
 10+	 Guide / EPG / -/--
 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer
 Clear	 Exit / Cancel / Clear
 Prog	 TV/Radio /
 Time	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Title	 Sound / Title
 Menu	 Menu / Home
 Default	 AV / Input / RDS
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze


























































 













	Original	Replacement		Original	Replacement
		 I<< / Preset-			
		 >> / Tune+			
		 Stop / Hold			
		 >> / Preset+			
		 Red / Netflix / Search			
		 Green / APP / Repeat			
		 Yellow / YouTube / Repeat			
		 Zoom / Size			
		 D.Menu / Top			
		 Shift + Pause / Step /			
		 Shift + Play /			
		 Vol+			
		 Smart / List			
		 Picture / Format			
		 Back / Return			
		 Vol-			


























 
Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+

Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+


















































Original	Replacement	Original	Replacement
Volume-	 Vol-		
Display	 Display / Media		
Slow Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
+10	 Guide / EPG / -/--		
0	 0		
R/L	 Fav / Marker / PC		
Search	 Red / Netflix / Search		
Repeat/1/All	 Green / APP / Repeat		

Original	Replacement	Original	Replacement
Rep/A-B	 Yellow / YouTube / Repeat		
Shuffle	 Blue / Prime Video / Random		
Karaoke/Step	 Shift + Pause / Step /		
Echo+	 Shift + Up		
Echo-	 Shift + Down		
3D	 Shift + 3		
Video	 Shift + 4		





Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Resume	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Mode	 Smart / List
Pbc	 Sleep / Timer	Slow Up	 CH+ / Page+

Original	Replacement	Original	Replacement
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Resume	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Mode	 Smart / List
Pbc	 Sleep / Timer	Slow Up	 CH+ / Page+





Original	Replacement	Original	Replacement
Volume-	Vol-	Rep/A-B	Yellow / YouTube / Repeat
Display	Display / Media	R/L	Blue / Prime Video / Random
Slow Down	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
+10	Guide / EPG / -/--		
0	0		
C/CH	Fav / Marker / PC		
Np	Red / Netflix / Search		
Repeat/1/All	Green / APP / Repeat		

