



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Freeze	 Shift + Pause / Step /
 0	 0
 Aspect Ratio	 D.Menu / Top
 Guide	 Guide / EPG / -/--
 ?	 Shift + Info / Angle
 TXT	 Text / Goto

Original	Replacement
 OPT	 Setup / OPT /
 Back	 Back / Return
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Vol+	 Vol+
 ↑ Page+	 Shift + Up
 CH+	 CH+ / Page+
 Vol-	 Vol-
 ↓ Page-	 Shift + Down
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search





	Original	Replacement	Original	Replacement
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	TV/R	 TV/Radio /		
	SUB	 Subtitle / EQ		
	LANG	 Audio / Lang I/II		
	⏰	 Sleep / Timer		
	Rec	 Rec / Rec Mode		
	▶	 Play / Slow		
	⏸	 Pause / Step / Freeze		
	■	 Stop / Hold		
	<<	 << / Tune-		
	I<	 I<< / Preset-		
	>I	 >>I / Preset+		
	>>	 >> / Tune+		

