



Original	Replacement	Original	Replacement
Input	AV / Input / RDS	OK	OK
Power	Power	Right	Right
Xumo	Setup / OPT /	Down	Down
Netflix	Red / Netflix / Search	Back	Back / Return
Amazon	Blue / Prime Video / Random	Guide	Guide / EPG / -/-
<<	<< / Tune-	Vol+	Vol+
Pause	Pause / Step / Freeze	V	Display / Media
Play	Play / Slow	CH+ / Page+	CH+ / Page+
>>	>> / Tune+	Vol-	Vol-
CC	Subtitle / EQ	CH- / Page-	CH- / Page-
Rec	Rec / Rec Mode	Mute	Mute / Dimmer
Stop	Stop / Hold	[ ]	Zoom / Size
Menu	Menu / Home	PIC	Picture / Format
Exit	Exit / Cancel / Clear	Recall	Fav / Marker / PC
Info	Info / Angle	1	1
Up	Up	2	2
Left	Left	3	3





Original		Replacement		Original		Replacement	
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
ENTER	Enter	LIST SMART	Smart / List				
0	0	HDMI - BAT 0	0				
--	--	GOTO TEXT	Text / Goto				

