



Original	Replacement	Original	Replacement
 Power	 Power	 OSD/Info	 Info / Angle
 1	 1	 Prog	 TV/Radio /
 2	 2	 Setup	 Setup / OPT /
 3	 3	 Menu	 Menu / Home
 4	 4	 Audio	 Audio / Lang I/II
 5	 5	 Title	 Shift + Sound / Title
 6	 6	 Subtitle	 Subtitle / EQ
 7	 7	 Timer	 Shift + Sleep / Timer
 8	 8	 +10	 Guide / EPG / -/-
 9	 9	 Sleep	 Sleep / Timer
 0	 0	 Play	 Play / Slow
 AUX	 Shift + 7	 Clock	 Back / Return
 USB	 Shift + 8	 Pause	 Pause / Step / Freeze
 Card	 Shift + 4	 Enter	 OK
 DVD	 Shift + 2	 Up/Preset+	 Up
 Tuner	 Shift + 6	 Down/Preset-	 Down
 Tape	 Shift + 5	 >>/Tun+	 >> / Tune+





Original		Replacement		Original		Replacement	
	<</Tun-		<< / Tune-		RDS/A-B		AV / Input / RDS
	I<<		I<< / Preset-		Zoom		Zoom / Size
	>>I		>>I / Preset+		P.Scan		Eject / Surround
	Stop		Stop / Hold		Angle		Shift + Info / Angle
	Repeat		Green / APP / Repeat		Step		Shift + Pause / Step /
	Goto		Text / Goto		Slow		Shift + Play /
	Rec		Rec / Rec Mode				
	Vol-		Vol-				
	Vol+		Vol+				
	Mute		Mute / Dimmer				
	Demo		Picture / Format				
	EQ		Shift + Subtitle / EQ				
	Bass		Shift + Audio / Lang I/II				
	St/Mono		Sound / Title				
	Bookmark		Display / Media				
	Intro		D.Menu / Top				
	Rand		Blue / Prime Video / Random				

