 

 

 
 

 





 




 




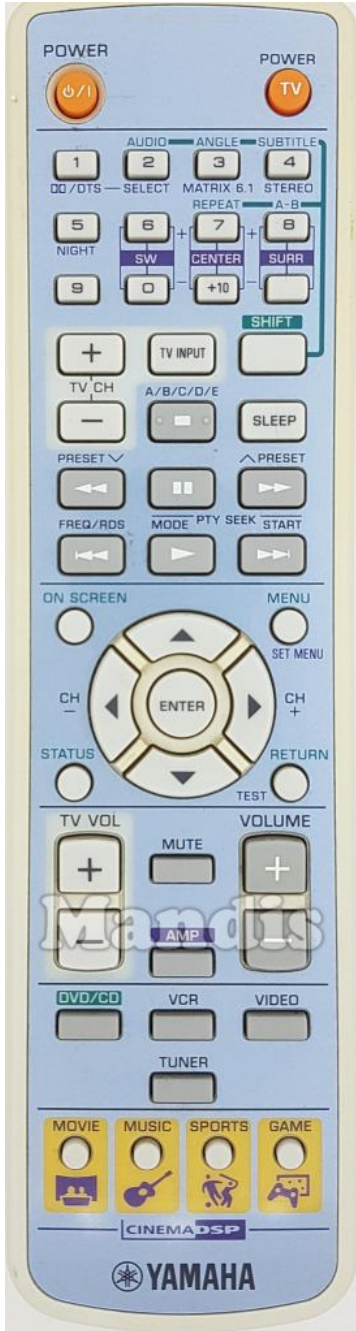 








 

 
 
 
 
 
 


 


 
 

 






Original		Replacement		Original		Replacement	
	Power		Power		Pause		Pause
	1		1		Sleep		Sleep
	2		2		On screen		Info
	3		3		Menu		Menu
	4		4		Set Menu		D. Menu
	5		5		VCR		Green
	6		6		Video		Yellow
	7		7		DVD/CD		Blue
	8		8		Tuner		Red
	9		9		Status		Media
	0		0		Return		Back
	Stop/A/B/C/D/E		Stop		Test		Guide
	<</Preset		<<		Mute		Mute
	>>/Preset Up		>>		Up		Up
	>>I/PTY SEEK		>>I		Enter		Ok
	I<</Freq/RDS		I<<		Down		Down
	Play/PTY SEEK		Play		Right/CH+		Right





	Original	Replacement		Original	Replacement
	Left/CH-				Left
	Volume+				Vol +
	Volume-				Vol -
	Music				3D
	Game				AV
	Sports				Eject
	Movie				Format
	[oo]/DTS				Shift + Dual
	Select				List
	Matrix 6.1				Smart
	Stereo				Options
	Night				Shift + 5
	SW+				Shift + 7
	Center+				Shift + 8
	SURR+				Shift + 9
	SURR-				Shift + Pre Ch
	SW-				Shift + Guide

	Original	Replacement		Original	Replacement
	Center-				Shift + 0
	Angle				Pre Ch
	Audio				Dual
	Subtitle				Subt
	Repeat				Text
	A-B				TV/R



