
 


 
 

 



 


 







 














 




Original	Replacement
	 Power
	 Tv/Radio
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Fav / Marker / PC
	 Text / Goto
	 Shift + Stop /
	 Guide / EPG / -/--
	 Subtitle / EQ
	 Zoom / Size
	 Shift + Picture / Format
	 Smart / List
	 Eject / Surround
	 Play / Slow
	 Pause / Step / Freeze

Original	Replacement
	 << / Tune-
	 >> / Tune+
	 Rec / Rec Mode
	 Stop / Hold
	 I<< / Preset-
	 Sleep / Timer
	 >>I/Index
	 Audio / Lang I/II
	 Menu / Home
	 Exit / Cancel / Clear
	 Up
	 Down
	 Right
	 Left
	 OK
	 Vol+
	 Vol-





Original	Replacement	
Mute		Mute / Dimmer
Display		Display / Media
CH+		CH+ / Page+
CH-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
-/--	 + 	Shift + Guide / EPG / -/--
Recall		Back / Return
Source		AV / Input / RDS

[illegible]