

























 













 





 

 

 





 
 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide / EPG / -/--
 Rec	 Rec / Rec Mode
 Info	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-

Original	Replacement
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 ≡	 D.Menu / Top
	 AV / Input / RDS
	 Display / Media
	 Up
	 Down
	 Right
	 Left
 OK	 OK
 BACK	 Back / Return
 EXIT	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Menu / Home
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random





Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Subt	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 TXT	 Text / Goto
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Shift + Green / APP /

Original	Replacement

