


 



 




 
 










 




 
 
 

 






 









 


 


 

 
 
 

 









Original		Replacement		Original		Replacement	
	Power		Power		Guide		Guide
	Mute		Mute		i		Info
	NTSC / PAL		Format		Menu		Menu
	Audio		Dual		Up / CH+		Up
	AV		AV		Down / CH-		Down
	1		1		Right / Vol+		Right
	2		2		Left / Vol-		Left
	3		3		OK		Ok
	4		4		Up / CH+		Ch +
	5		5		Down / CH-		Ch -
	6		6		Right / Vol+		Vol +
	7		7		Left / Vol-		Vol -
	8		8		↑		Shift + Ch +
	9		9		↓		Shift + Ch -
	0		0		Exit		Exit
	TV / Radio		TV/R		FAV		Pre Ch
	Recall		Back		SAT		Smart





Original		Replacement		Original	Replacement
	<<		<<		
	Play		Play		
	>>		>>		
	> <	 + 	Shift + Stop		
	>	 + 	Shift + Pause		
	Pause		Pause		
	Stop		Stop		
	<		<<		
	>		>>		
	Rec		Rec		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Text		Text		
	Subtitle		Subt		

