 
 

 
 

 
 
 
 
 
 




Original	Replacement
 Power	 Power
 Mute	 Mute
 Audio / Nicam/A2	 Dual
 Aspect	 Format
 P Mode	 Shift + Format
 S Mode	 Shift + Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch

Original	Replacement
 Recall	 Back
 Display	 Info
 Freeze	 Shift + Pause
 Rec	 Rec
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Sleep	 Sleep
 Source	 AV
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit





Original	Replacement
Subtitle	Subt
CH +	Ch +
CH -	Ch -
Home	Smart
Vol +	Vol +
Vol -	Vol -
Hold / Play/Pause	+  Shift + Stop
Hold / Play/Pause	Play
Hold / Play/Pause	Pause
Reveal / <<	<<
Size / >>	>>
Size / >>	Eject
Index / Stop	Stop
Index / Stop	+  Shift + Info
I<<	I<<
S.Page / >>I	>>I
S.Page / >>I	+  Shift + Subt

Original	Replacement
Text	Text
EPG	Guide
Mouse	Media

