









 
 



 
 
 

 

 


 

 



Original	Rechange
Power	Power
Source	SRC
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TTX/MIX	TEXT
PRE-CH	P/C / FAV
Vol+	VOL +
Vol-	VOL -
Mute	MUTE

Original	Rechange
P+	CH +
P-	CH -
CH List	TV/R
Content	Shift + VOD
Menu	MENU
Guide	-/-- / EPG
Tools	OPT+
Info	INFO
Return	BACK
Exit	EXIT
Up	UP
Down	DOWN
Right	RIGHT
Left	LEFT
Enter	OK
Red	Red (A)
Green	Green (B)





Original		Rechange		Original		Rechange	
	Yellow		Yellow (C)				
	Blue		Blue (D)				
	Media. P		MEDIA				
	Internet/@TV		VOD				
	Dual I-II		Audio				
	AD		WIDE				
	P.Size		V-FOR				
	Subt.		Subt.				
	<<		Rewind				
	Pause		Pause				
	>>		Fast Forward				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

