



Original		Recharge		Original		Recharge	
	Power		Power		Info		Info / Angle
	Mute		Mute / Dimmer		[ I ]/Menu		Menu / Home
	Red		Red / Netflix / Search		Up		Up
	Green		Green / APP / Repeat		Source		AV / Input / RDS
	Yellow		Yellow / YouTube / Repeat		Left		Left
	Blue		Blue / Prime Video / Random		OK		OK
	<</[≡o]		<< / Tune-		Right		Right
	>>/[≡?]		>> / Tune+		Down		Down
	I<</[≡+]		I<< / Preset-		EPG		Guide / EPG / -/-
	>>I/[≡..]		>>I / Preset+		Exit		Exit / Cancel / Clear
	Play		Play / Slow		Vol+		Vol+
	Pause		Pause / Step / Freeze		FAV		Fav / Marker / PC
	Stop		Stop / Hold		CH+		CH+ / Page+
	[≡i]		Smart / List		Vol-		Vol-
	Text		Text / Goto		REP/Rec		Rec / Rec Mode
	Subtitle		Subtitle / EQ		CH-		CH- / Page-
	Freeze		Shift + Pause / Step / Freeze		1		1





Original		Rechange		Original		Rechange	
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II				
0	0	HDMI - SAT 0	0				
RECALL	Recall	RETURN BACK	Back / Return				


















 
 




Original	Recharge	Original	Recharge
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1

Original	Recharge	Original	Recharge
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1





































Original	Recharge	Original	Recharge
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
EPG		Guide / EPG / -/--	
0		0	
FAV		Fav / Marker / PC	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	
Blue		Blue / Prime Video / Random	
<</Hold		Shift + Stop /	
FAV-		Shift + Left	

Original	Recharge	Original	Recharge
FAV+		Shift + Right	
-/--		Shift + Guide / EPG / -/--	















 


Original	Rechange	Original	Rechange
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Rechange	Original	Rechange
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Recharge	Original	Recharge
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 Shift + Pause / Step /		

