



Original	Recharge
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV/Source	AV / Input / RDS
0	0
Exit	Exit / Cancel / Clear
-/--	-/--
-/--	Shift + Guide / EPG / -/--
CH+	CH+ / Page+
[i]/Info	Info / Angle

Original	Recharge
Vol+	Vol+
CH-	CH- / Page-
I-II	Audio / Lang I/II
Vol-	Vol-
Up	Up
Left	Left
OK/Select	OK
Right	Right
Menu	Menu / Home
Down	Down
TV/DTV	TV/Radio /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[=]/Text	Text / Goto
[=o]	Sleep / Timer



