



Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		Vol-		Vol-
	0		0		MTS		Info / Angle
	DTV/ATV		D.Menu / Top		Rec List		Smart / List
	Recall		Back / Return		CH+		CH+ / Page+
	P.Mode		Picture / Format		CH-		CH- / Page-
	S.Mode		Sound / Title		FAV/List		Fav / Marker / PC
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode





Original	Recharge
Freeze	Pause / Step / Freeze
Guide	Guide / EPG / -/-
<<	<< / Tune-
>> / Aspect	>> / Tune+
>> / Aspect	Shift + Picture / Format
I<< / Cancel	I<< / Preset-
I<< / Cancel	Shift + Exit / Cancel / Clear
>>I / Sub.PG	>>I / Preset+
Stop / Index	Stop / Hold
Play/Pause / Timeshift	Play / Slow
Tv/Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	Eject / Surround
Size	Zoom / Size
Hold	Shift + Stop /
Text	Text / Goto
Red	Red / Netflix / Search


Original	Recharge
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random





Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		Vol-		Vol-
	0		0		MTS		Info / Angle
	DTV/ATV		D.Menu / Top		Rec List		Smart / List
	Recall		Back / Return		CH+		CH+ / Page+
	P.Mode		Picture / Format		CH-		CH- / Page-
	S.Mode		Sound / Title		FAV/List		Fav / Marker / PC
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode



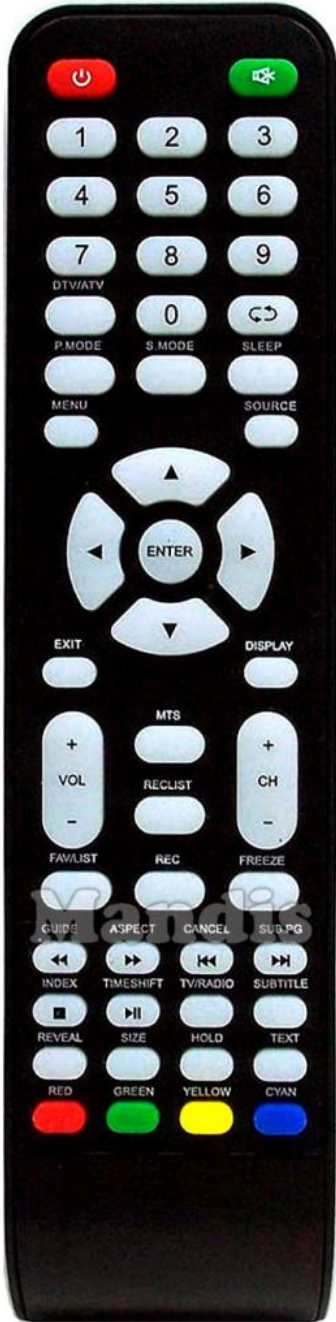

	Original	Rechange		Original	Rechange
	Freeze	Pause / Step / Freeze		Green	Green / APP / Repeat
	Guide	Guide / EPG / -/-		Yellow	Yellow / YouTube / Repeat
	<<	<< / Tune-		Cyan	Blue / Prime Video / Random
	>> / Aspect	>> / Tune+			
	>> / Aspect	Shift + Picture / Format			
	I<< / Cancel	I<< / Preset-			
	I<< / Cancel	Shift + Exit / Cancel / Clear			
	>>I / Sub.PG	>>I / Preset+			
	Stop / Index	Stop / Hold			
	Play/Pause / Timeshift	Play / Slow			
	Tv/Radio	TV/Radio /			
	Subtitle	Subtitle / EQ			
	Reveal	Eject / Surround			
	Size	Zoom / Size			
	Hold	Shift + Stop /			
	Text	Text / Goto			
	Red	Red / Netflix / Search			

