











 



 











 



 





Original	Recharge
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 P<P	 Smart / List
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 AV	 AV / Input / RDS
 Tv/R	 TV/Radio /
 Info	 Info / Angle
 I-II	 Audio / Lang I/II
 Vol+	 Vol+

Original	Recharge
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PP	 Back / Return
 0	 0
 Exit	 Exit / Cancel / Clear
 Exit	 Shift + Guide / EPG / -/-





	Original	Recharge	Original	Recharge
	[≡]/Text	GOTO TEXT		Text / Goto
	[≡0]	TUNE-		<< / Tune-
	[≡+]	TUNE+		>> / Tune+
	[≡x]	PRESET-		<<< / Preset-
	[.≡]/[*]	PRESET+		>>> / Preset+
	[≡◆]/[+]/Wide	FORMAT PICTURE		Picture / Format
	[≡?]/PC	PC FAV MARKER		Fav / Marker / PC
	[≡i]/Guide	GUIDE EPG		Guide / EPG / -/-

