



Original		Rechange		Original		Rechange	
	Power		Power		FAV-	+	Shift + CH- /
	Mute		Mute / Dimmer		CH+		CH+ / Page+
	1		1		P.Mode		Picture / Format
	2		2		Vol+		Vol+
	3		3		CH-		CH- / Page-
	4		4		S.Mode		Sound / Title
	5		5		Vol-		Vol-
	6		6		Source		AV / Input / RDS
	7		7		Sleep		Sleep / Timer
	8		8		Aspect	+	Shift + Picture / Format
	9		9		Info		Info / Angle
	-/--	+	Shift + Guide / EPG / -/--		Up		Up
	0		0		Left		Left
	Recall		Back / Return		OK		OK
	Audio		Audio / Lang I/II		Right		Right
	FAV+	+	Shift + CH+ /		Menu		Menu / Home
	FAV		Fav / Marker / PC		Down		Down





Original	Rechange	Original	Rechange
Exit	Exit / Cancel / Clear		Green / APP / Repeat
Text	Text / Goto		Yellow / YouTube / Repeat
Index	Display / Media		Blue / Prime Video / Random
Play/Mix	Play / Slow		
Pause	Pause / Step / Freeze		
Stop/Reveal	Stop / Hold		
<</Hold	<< / Tune-		
<</Hold	Shift + Stop /		
>>/Subpage	>> / Tune+		
Size	Zoom / Size		
I<<	I<< / Preset-		
>>I/Cancel	>>I / Preset+		
T-Shift	Smart / List		
Tv/Radio	TV/Radio /		
Rec	Rec / Rec Mode		
EPG	Guide / EPG / -/--		
Red	Red / Netflix / Search		

