



Original	Rechange
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH.List	List
Recall	Pre Ch
Vol+	Vol +
Vol-	Vol -
PIC.Mode	Shift + Format

Original	Rechange
S.Mode	Shift + Dual
Source	AV
CH+	Ch +
CH-	Ch -
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Exit	Exit
Menu	Menu
Rec	Rec
Timeshift	Options
Timer	Shift + AV
Rec.List	Media
Red	Red
Green	Green



