

 






 










	Original	Rechange	Original	Rechange
	Power			Exit
	Mute			Up
	1			Down
	2			Right
	3			Left
	4			Ok
	5			Vol +
	6			Vol -
	7			Shift + Dual
	8			Options
	9			Ch +
	0			Ch -
	Audio			Sleep
	Recall			Aspect
	Tv-Menu			Shift + Media
	Source			TV/R
	CH.List			Text



