


 

 

 

 

 

 







 
 


 


 
 


Original	Rechange
 Power	 Power
 [i]/Info	 Info
 Mute	 Mute
 I-II	 Dual
 OK/Select	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/+10	 +  Shift + Guide
 Exit	 Exit

Original	Rechange
 Menu	 Menu
 Red/↑/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Yellow
 Blue/Angle	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<





Original	Recharge	Original	Recharge
	>>		>>
	[TV]		TV/R
	D-Menu		Smart
	TV		Media
	AV		AV
	P<P		Pre Ch
	PP		D. Menu
	[≡]		Text
	[≡o]		Subt
	[≡+]		Format
	[≡x]		3D
	[≡◆]/Wide		Shift + Format
	[≡?]		Options
	[≡i]/Guide		Guide
	[:::]/Subtitle		Back







Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/+10	 Guide
 Exit	 Exit
 Red/↑/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Shift + Yellow
 Blue/Angle	 Blue

Original	Recharge
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 D-Menu	 Smart
 <<	 <<
 >>	 >>
  <<	  <<
 >>	 >>
 Time	 Shift + AV
 Zoom	 Shift + Eject
 Program	 Sleep
 Search Mode	 AV
 Repeat	 Text
 A-B	 Shift + Play
 C	 Yellow
 Title	 Info
 Display	 Shift + Info



