 















 









 









 







 



























Original		Rechange		Original		Rechange	
	Input		AV / Input / RDS		ATV/DTV		TV/Radio /
	Power		Power		Vol+		Vol+
	[▼]		Fav / Marker / PC		[≡i]/[i+]		Info / Angle
	Text		Text / Goto		PR+		CH+ / Page+
	Subtitle		Subtitle / EQ		Vol-		Vol-
	O)/I/II		Audio / Lang I/II		Mute		Mute / Dimmer
	1		1		PR-		CH- / Page-
	2		2		Quick		Smart / List
	3		3		Guide		Guide / EPG / -/-
	4		4		Up		Up
	5		5		Exit		Exit / Cancel / Clear
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Menu		Menu / Home
	AD		Sound / Title		Down		Down
	0		0		Return		Back / Return





Original	Recharge	Original	Recharge
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [≡?]	 Display / Media		
 [≡+]	 Stop / Hold		
 [≡◇]	 Zoom / Size		
 Timer/[≡x]	 Sleep / Timer		

