



Original		Rechange		Original		Rechange	
	Open/Close		Eject / Surround		0		0
	Input Select		AV / Input / RDS		Clear		Exit / Cancel / Clear
	HDMI		Shift + 0		[i+]/Info		Info / Angle
	Standby		Power		Text		Text / Goto
	1		1		Variable Replay		Vol+
	2		2		Variable Skip		Vol-
	3		3		Guide		Guide / EPG / -/--
	Prog+		CH+ / Page+		Top Menu		D.Menu / Top
	4		4		Disc Menu		Menu / Home
	5		5		Up		Up
	6		6		Left		Left
	Prog-		CH- / Page-		Enter		OK
	7		7		Right		Right
	8		8		Display		Display / Media
	9		9		Down		Down
	Timer Prog		Sleep / Timer		Return		Back / Return
	Setup		Setup / OPT /		Red		Red / Netflix / Search



